

## Servicing—Pro Sensor Automatic Inflator



# UNITED MOULDERS LTD

### UML Pro Sensor Rearming Instructions



- Do not detach the inflator from the lifejacket.
- Refer to lifejacket manufacturers instructions prior to re-arming.
- Before commencing the re-arming procedure, ensure you have the correct kit and correct size of CO<sub>2</sub> Cylinder and that the lifejacket is dry.
- Keep away from fluids.
- Ensure the automatic cartridge is within it's Replace by Date.

### Step 1

Unscrew the automatic cartridge by turning it anti-clockwise and discard in an environmentally friendly manner. Replace it with the new cartridge by turning it clockwise and tighten up hand tight. Ensure the bottom indication turns green.



### Step 2

Remove the CO<sub>2</sub> Cylinder by turning it anti-clockwise and discard it in an environmentally friendly manner.




### Step 3

If the unit has been manually activated, push the lever back into its slot until it clicks into position.



### Step 4

Ensure the black CO<sub>2</sub> Cylinder seal is fitted correctly.

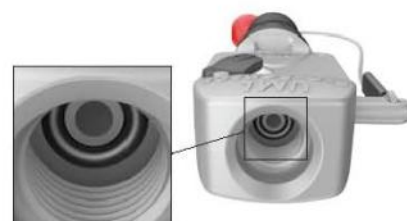

### Step 5

Ensure the CO<sub>2</sub> Cylinder cap has not been pierced and then screw it clockwise into the UML Pro Sensor inflator. Tighten up hand tight, ensuring both the top and bottom indicators are green.



- Re-pack the lifejacket according to the lifejacket manufacturers instructions.
- When not in use, store the lifejacket in a cool, dry place out of direct sunlight.